




A DIVISION OF STUDCO BUILDING SYSTEMS US, LLC




INSTALLATION INSTRUCTIONS FOR EZY-JAMB WITH INVISIBLE HINGES

STEP 1

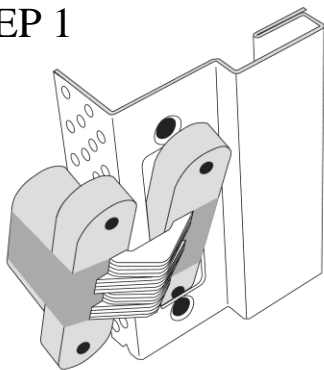

When installing a SOSS invisible hinge in the EZY-jamb metal door frame, STUDCO recommends only the use of wood studs around the door opening. The studs must be notched to allow the hinge to be installed. The notch should be 4-7/8" long x 1-5/8" wide from the face of the drywall x 1-5/8" deep.

STEP 2

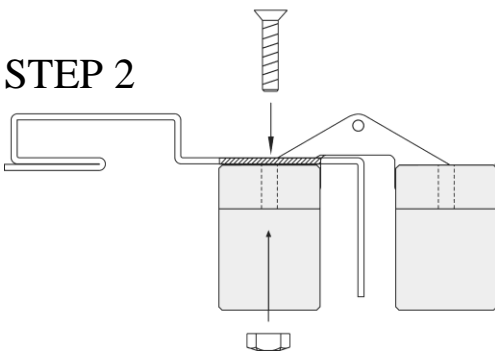

VERY IMPORTANT:

The SOSS invisible hinge must be fastened into the door frame before it is installed. Install as shown by sliding the hinge into the hole(STEP 1) and fastening it to the door frame(STEP 2)

STEP 3:

The EZY-JAMB is then screwed through the perforated edge at 8" centers. Where the hinge is positioned an additional 2 screws are required at the top and bottom of the hinge. Also it must be screwed through the face of the jamb into the stud through the holes provided. (SEE EZY-JAMB INSTALLATION INSTRUCTIONS) HINGE LOCATIONS ARE ON THE FOLLOWING HINGE CHART

545 BASKET RD. WEBSTER, NY 14580 P: 800.675.8023
F: 585.265.6678 EMAIL: sales@ezyjamb.com www.ezyjamb.com