




A DIVISION OF STUDCO BUILDING SYSTEMS US, LLC

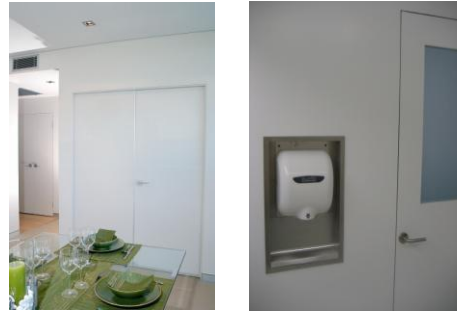


INSTALLATION INSTRUCTIONS FOR POCKET DOORS

ITEMS INCLUDED IN THE EZY-JAMB POCKET DOOR SYSTEM

- *2 PCS.- EZY-REVEAL @ THE DOOR HEIGHT
- *2 PCS.- EZY-REVEAL @ THE DOOR WIDTH
- *1 PCS.- EZY-CAP @ THE DOOR HEIGHT
- *2 PCS.- ALUMINUM CHANNEL @ THE DOOR WIDTH
- *8 EA.- SCREWS FOR ALUMINUM CHANNEL


STEP 1 INSTALL EZY-REVEAL

Take 2 pieces of EZY-REVEAL that are the exact length for the door height and put them on either side of the door. Make sure the pocket door frame is level and square. Screw the EZY-REVEAL every 8" up the side of the frame and put 2 screws at the corners. Take the 2 pieces of EZY-REVEAL that are the exact width of the head frame and put them along the top on either side of the track. Screw every 8" across the top and 2 screws in the corners.

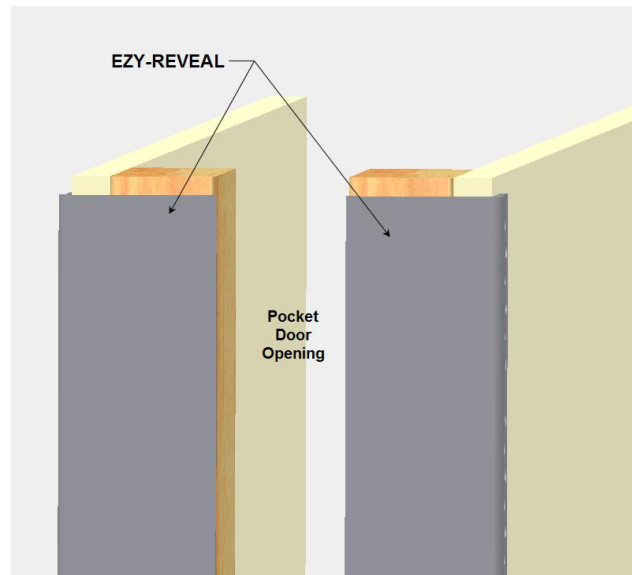

STEP 2 INSTALL EZY-CAP

Take the one piece of EZY-CAP that is the same height as the door frame and put it over the end of the wall. Make sure the EZY-CAP is level and screw every 8" up the frame.

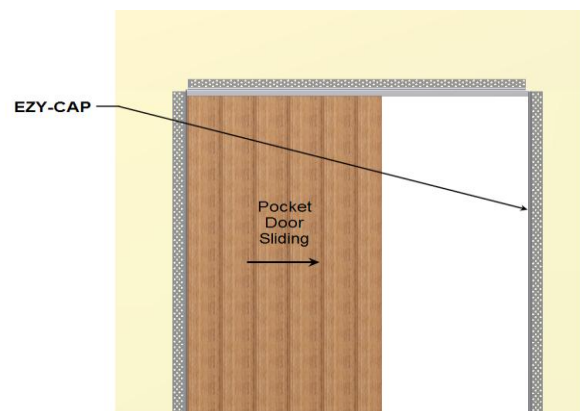

545 BASKET RD. WEBSTER, NY 14580 P: 800.675.8023
F: 585.265.6678 EMAIL: sales@ezyjamb.com www.ezyjamb.com



A DIVISION OF STUDCO BUILDING SYSTEMS US, LLC





STEP 3 INSTALL ALUMINUM PIECES

Install head frame aluminum pieces that are the same width as the door frame.

OPTIONAL: Vertical side aluminum sections are available at an additional cost

Top Corner Section

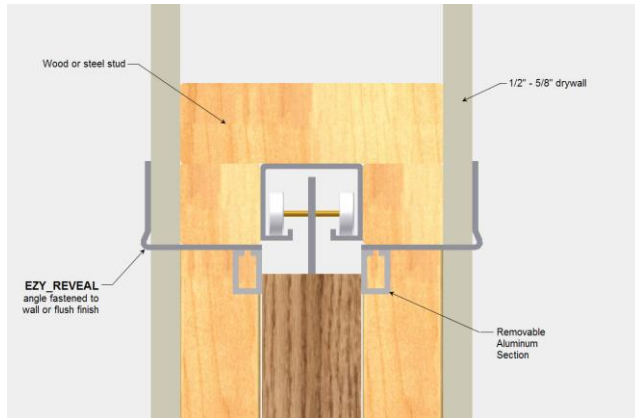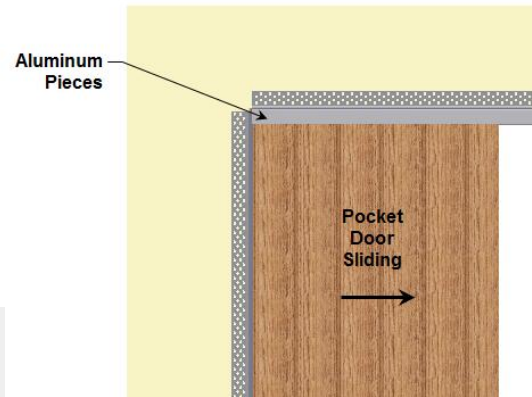

STEP 4 TAPE THE TOP CORNERS AND FINISH THE FRAME

Tape the top 4 corners of the frame With drywall tape and finish it with a standard drywall compound. You have now completed a TRIMLESS POCKET DOOR

